



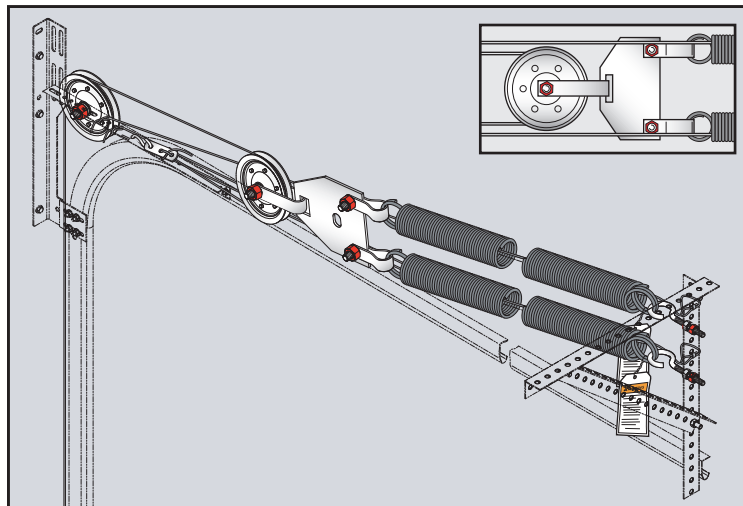

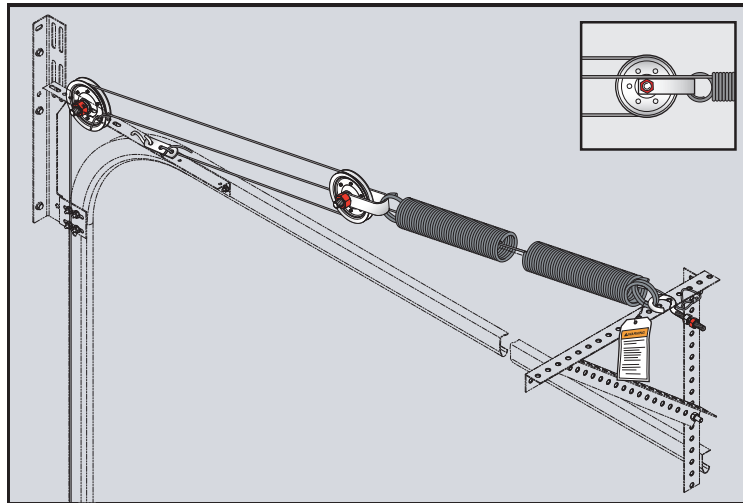








 
 
 

 
 
Extension Spring Installation Instructions



Distributed by:
Amarr Garage Doors
3800 Greenway Circle
Lawrence, KS 66046 USA
Customer Service:
1-866-366-7701

Form # 080 (09/20/05)
Printed in U.S.A.

ICON GUIDE

ICON	INDICATES:
	STEP; ORDER OF INSTRUCTION, APPLIES TO SINGLE AND DOUBLE LAYER PANELS ONLY <i>EXAMPLE: STEP A3</i>
	STEP; ORDER OF INSTRUCTION, APPLIES TO TRIPLE LAYER PANELS ONLY <i>EXAMPLE: STEP B3</i>
	STEP; ORDER OF INSTRUCTION, APPLIES TO ALL PANELS <i>EXAMPLE: STEP 3</i>
	ORIENTATION OF THE VIEW BELOW <i>EXAMPLE: VIEW OF THE RIGHT SIDE OF THE ASSEMBLY</i>
	MIRROR IMAGE OF VIEW BELOW <i>EXAMPLE: MIRROR IMAGE OF VIEW IS LEFT SIDE OF ASSEMBLY</i>
	ITEM NUMBER <i>EXAMPLE: ITEM NUMBER 5</i>
	APPLIES TO THIS ITEM, CHECK STEP or PASSES TEST
	DOES NOT APPLY TO THIS ITEM, WRONG WAY or DOES NOT PASS TEST
	PART FOR SINGLE SPRING SYSTEM
	PART FOR DUAL SPRING SYSTEM
	STEP APPLIES TO SINGLE SPRING SYSTEM
	STEP APPLIES TO DUAL SPRING SYSTEM
	DRILL BIT SIZE <i>EX: 3/16" DRILL BIT</i>
	WRENCH SIZE <i>EX: 9/16" WRENCH</i>
	SOCKET WRENCH SIZE <i>EX: 7/16" SOCKET WRENCH</i>



1		✓	✗	
2		✓	✓	
3		✗	✓	
4		✗	✓	
5		✓	✓	
6		✗	✓	
7		✓	✓	
8		✗	✓	
9		✓	✓	
10		✓	✓	
11		✓	✓	
12		✓	✓	
13		✓	✓	
14		✓	✓	

